

# KE 0108CH-DW

Specification

## TWISTED PAIR DISTRIBUTOR

The product, KE 0108CH-DW is a distributor for Kowa's twisted pair extension system, which transmits image signals long distance through a twisted pair cable. ( CAT5e standards )

To use the KE 0108CH-DW, install it between the transmitter(KE 0202CT2(w-type)) and the receiver (KE 0101CR-BW).


### Specification

Model name	KE 0108CH-DW
Number of input channels	1 system
Number of output channels	8 system
Input connector	RJ-45 connector
Output Connector	RJ-45 connector
Interface cable for extension	CAT5e cable
Temperature and humidity operating conditions	Temperature: 0 ~ 40 ° Humidity: 20 ~ 80%(no condensation)
Power source	AC adapter
Power Consumption	approximately 30W
Power (AC adapter)	Input:AC100-240V 1.2A 50-60Hz Output:DC16V 2.81A
Dimension	W210 × D250 × H44(mm)
Weight	approximately 1.5kg


Note: Do not connect any unauthorized product to the distributor. It can cause damage to the products.

### Appearance

#### 【Front Panel】

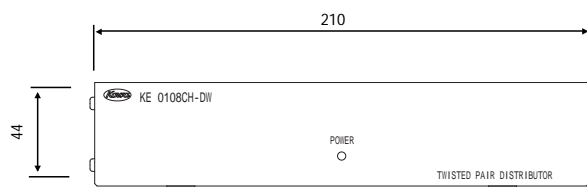

#### 【Back Panel】

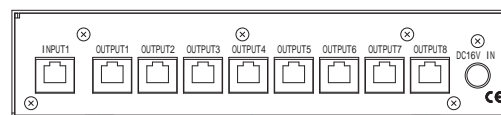

Design and specifications are subject to change without notice.

**Kowa Company, Ltd.**

<http://www.kowa.co.jp/i-master/cat5-eng>

Electronics and Optics Division

No.4-14, 3-chome, Nihonbashi-Honcho, Chuo-ku, Tokyo 103-8433, Japan  
Phone:+81 (0)3-3279-7330 Facsimile:+81 (0)3-3242-3170 E-mail: i-master@kowa.co.jp

**Kowa Europe GmbH**

Immermannstrasse 65A 40210 Dusseldorf F.R. Germany  
Phone:+49(0)211-1793540 Facsimile:+49(0)211-161952

**Kowa Optimed, Inc.**

20001 So. Vermont Ave. Torrance, CA 90502, U.S.A  
Phone:+1(310)327-1913 Facsimile:+1(310)327-4177  
E-mail: i-master@kowa.com

ver1.0  
2005/3